




- La ditta non si assume nessuna responsabilità nè rilascia alcuna garanzia se il prodotto viene inserito in sistemi o montato con particolari che non siano di produzione della ditta stessa.
La ditta si ritiene svincolata da qualsiasi indennizzo eventualmente richiesto dall'acquirente per danni subiti o arrecati a terzi.






- The Company disclaims all responsibility and will not release any warranty in case the product is installed on systems or used with components that have not been manufactured by the Company itself. The Company will not be held responsible for any customer claims due to damages suffered or caused to third parties.

The luminescent sticker is already applied on the hammer and must be exposed to the light continuously for at least 8-10 hours, in order to issue a glow of about 15 minutes in the dark. The lifetime of the sticker is 5 years about.

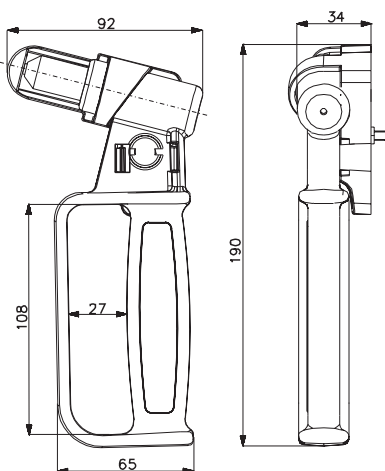


Total height with seat-belt cutter = 210mm

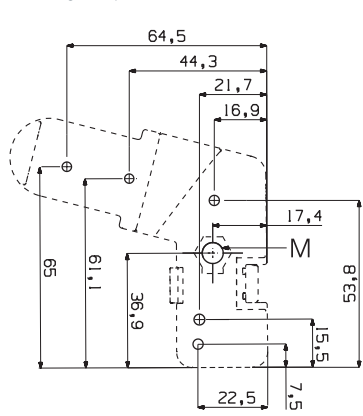

The hole indicated by letter M is needed only to fix a version with micro and must to be Ø12 mm

**Total height with seat-belt cutter = 210mm

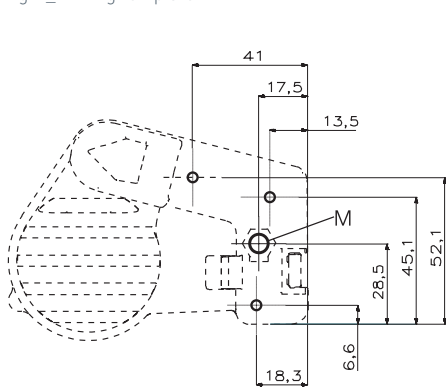

The hole indicated by letter M is needed only to fix a version with micro and must to be Ø12 mm

WARNING: all hammers included in this manual have been tested and have obtained TÜV certification for glasses of a maximum thickness of 8 mm. The company shall not be responsible for any components installed on vehicles which are not equipped with at least one (1) glass having the above-mentioned characteristics.



fig. E



fig. F



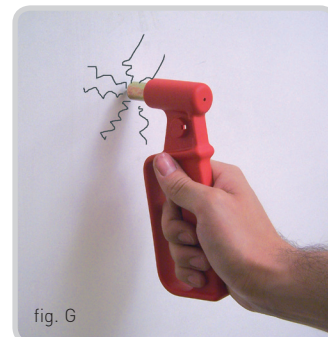




fig. 6

N.B.:

H): in order to mount the whole equipment, therefore, the lead must be squeezed (**fig.I**) keeping the wire tightened.

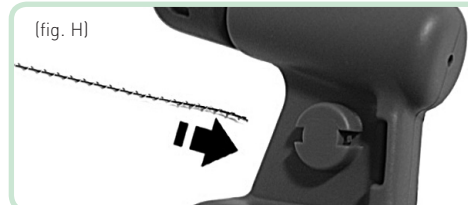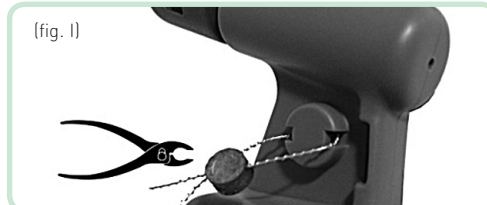

- 1) unscrew the nut and the washer from the micro (**fig. L**); scrap the washer.
- 2) insert OR in the micro and then into the support from behind (**fig. M**);
- 3) block the micro while tightening the nut from above to the support (**fig. N**).

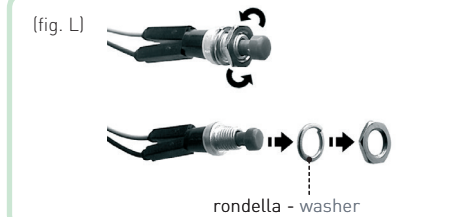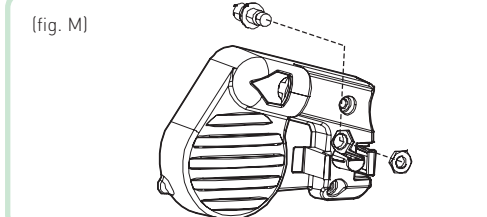

- 1 - Remove hammer from support.
- 2 - Unscrew screws.
- 3 - Remove support.

The abusive disposing from the user means the application of the administrative penalties foreseen from the national current norm. The separated collection and recycling allow to reduce the consumption of the natural resources, besides to save the environment and protect the human health.

SYMPTOM	PROBLEM	POSSIBLE REMEDY
The breaker arm with cable winding cable does not fit onto its sealing..	The cable is overlapped.	Withdrawal and reinsert the hammer throughout the entire length of the cable.
[Cod. 64478]: Cable withdrawal signal does not work.	The micro was not released, the electrical connections are incorrect.	Check once again the micro's position and that of the connections; if the problem persists, replace with spare part.

In case of contentions about products, please refer to the code and the lot number signed on the white label on the package

Cod. 66018: seal

Cod. 66761: support Ral 7043

Cod. 64721 :
micro normally closed

PRIMA Industries Srl
Via Pio La Torre, 6
42015 Correggio (RE) Italy
Tel. +39 0522 637583 - Fax +39 0522 641682
E-mail: info@primaindustries.it - www.primaindustries.it



Cod. 41372
Rev. 2 20/01/2017